


OVERVIEW

REVERSE CABLE
CONNECTION POINT

TRIM CABLE
CONNECTION POINT

STEERING CABLE
CONNECTION POINT

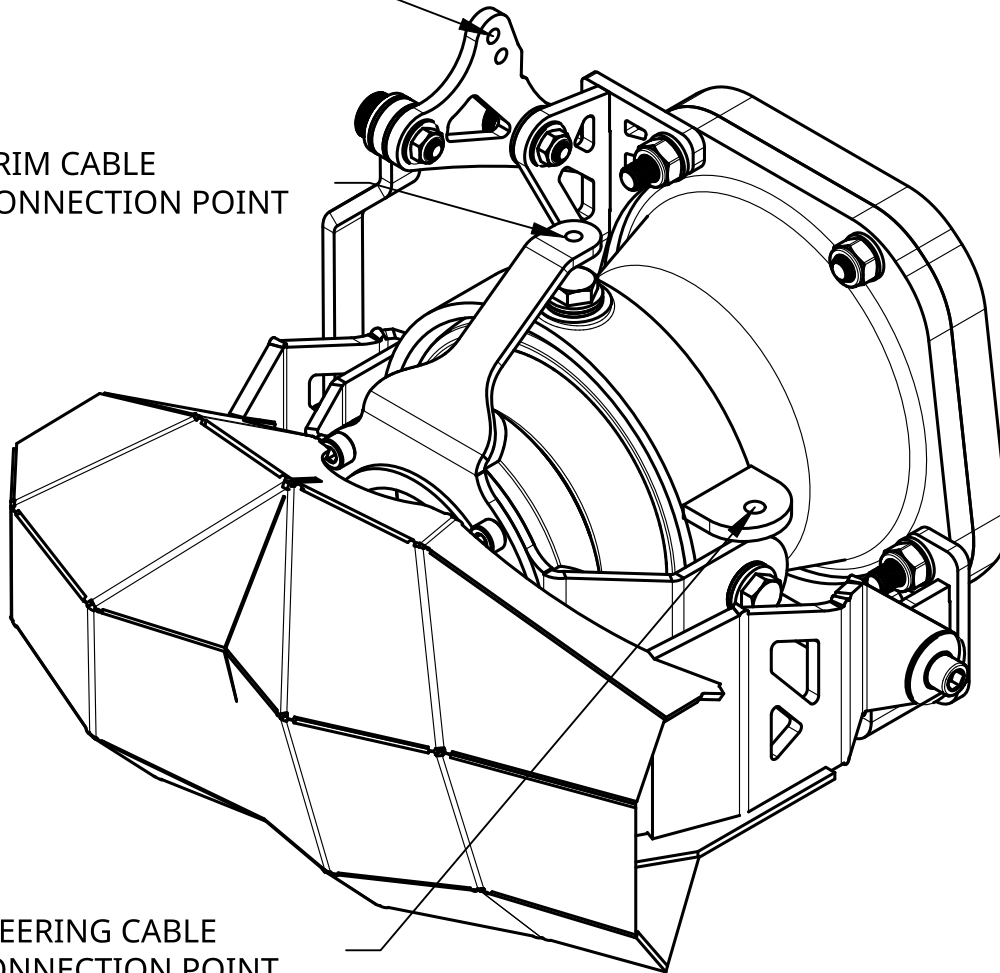

INCLUDED ITEMS

Quantity	Name
1	Nozzle Assembly
1	Reverse Bucket Assembly
1	Nozzle Adapter Plate
3	M10x1.5 - 55mm SS Hex Head Bolt
1	M10x1.5 - 40mm SS Hex Head Bolt
4	M10 SS Washer
4	M10x1.5 SS Lock Nut

NOTES:

IF NOZZLE IS PURCHASED WITHOUT
REVERSE BUCKET 3 40mm M10 BOLTS MAY
BE PROVIDED INSTEAD OF 3 55mm BOLTS



COPPER ANTI-SEIZE SHOULD BE APPLIED
TO ALL FASTENERS INTERFACING WITH
STAINLESS STEEL HARDWARE

TITLE: MJ NOZZLE - INSTALLATION
INSTRUCTIONS - NOZZLE AND BUCKET



SIZE A	CONTACT EMAIL: SALES@MINIJET.CA PHONE NUMBER: +1 (613) 605-2628	REV A
SCALE: 1:3	SHEET 1 of 5	

BULKHEAD CABLE INSTALLATION LOCATIONS

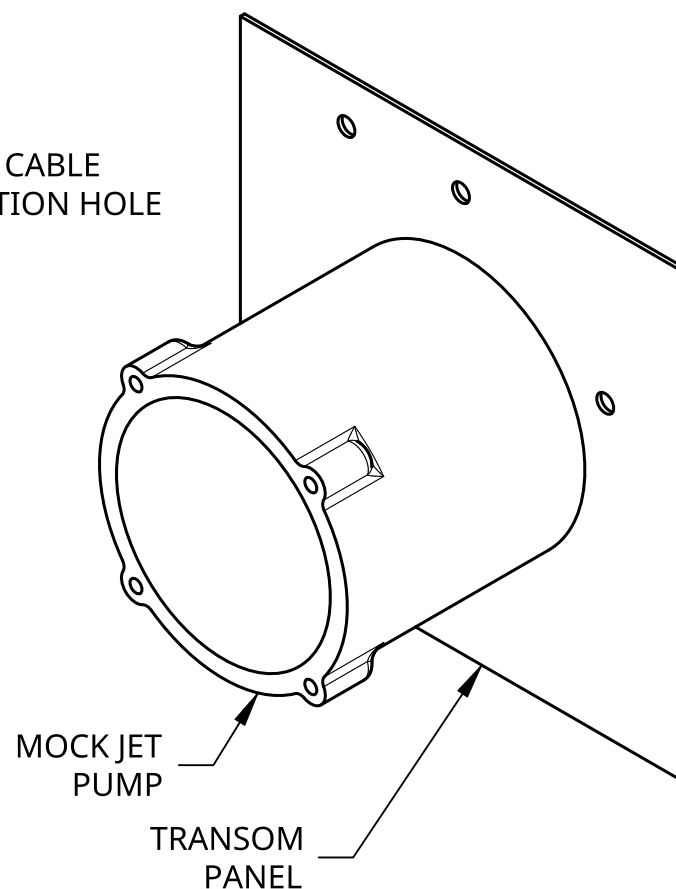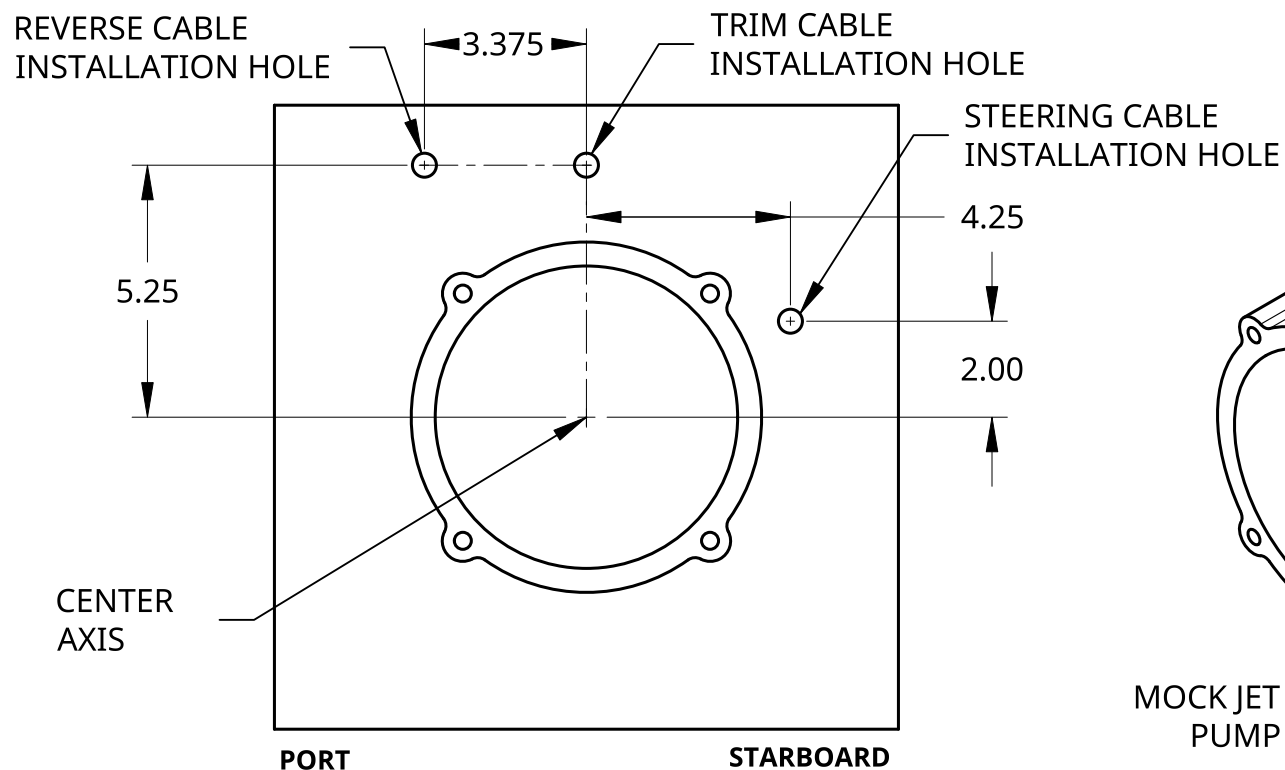

DIMENSIONS SPECIFIED IN INCHES


1. ENSURE CLEARANCE WITH SPECIFIC DONOR JET PUMP AND INTAKE HOUSING BEFORE FINILIZING PASS THROUGH LOCATIONS - MODIFY AS NEEDED
2. USE CABLE INSTALLATION HOLE DIAMETER SPECIFIED BY CABLE MANUFACTURER
3. DIMENSIONS TAKEN FROM CENTER AXIS OF JET PUMP/INTAKE OPENING

TITLE: MJ NOZZLE - INSTALLATION
INSTUCTIONS - NOZZLE AND BUCKET



SIZE A	CONTACT EMAIL: SALES@MINIJET.CA PHONE NUMBER: +1 (613) 605-2628	REV A
SCALE: 1:4		SHEET 2 of 5

MOUNTING THE NOZZLE ADAPTER PLATE

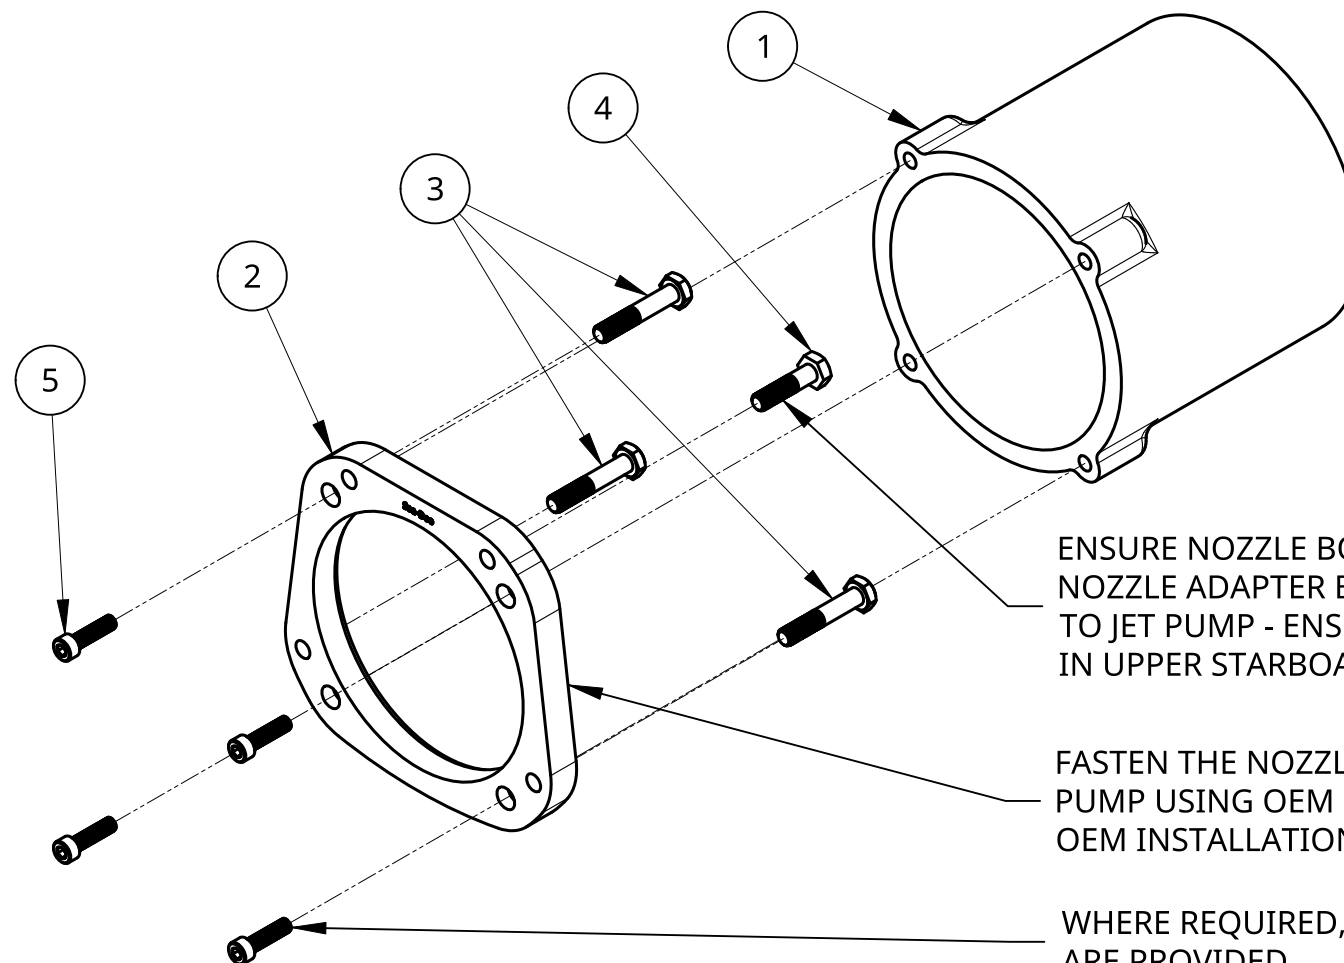

PARTS

1	Mock Jet Pump
2	Provided Nozzle Adapter Plate
3	Provided Nozzle Bolts - Long
4	Provided Nozzle Bolts - Short
5	OEM Pump Bolts

TITLE: MJ NOZZLE - INSTALLATION
INSTUCTIONS - NOZZLE AND BUCKET



SIZE
A


CONTACT EMAIL: SALES@MINIJET.CA
PHONE NUMBER: +1 (613) 605-2628

REV
A

SCALE: 1:4

SHEET 3 of 5

INSTALLING THE NOZZLE & REVERSE BUCKET

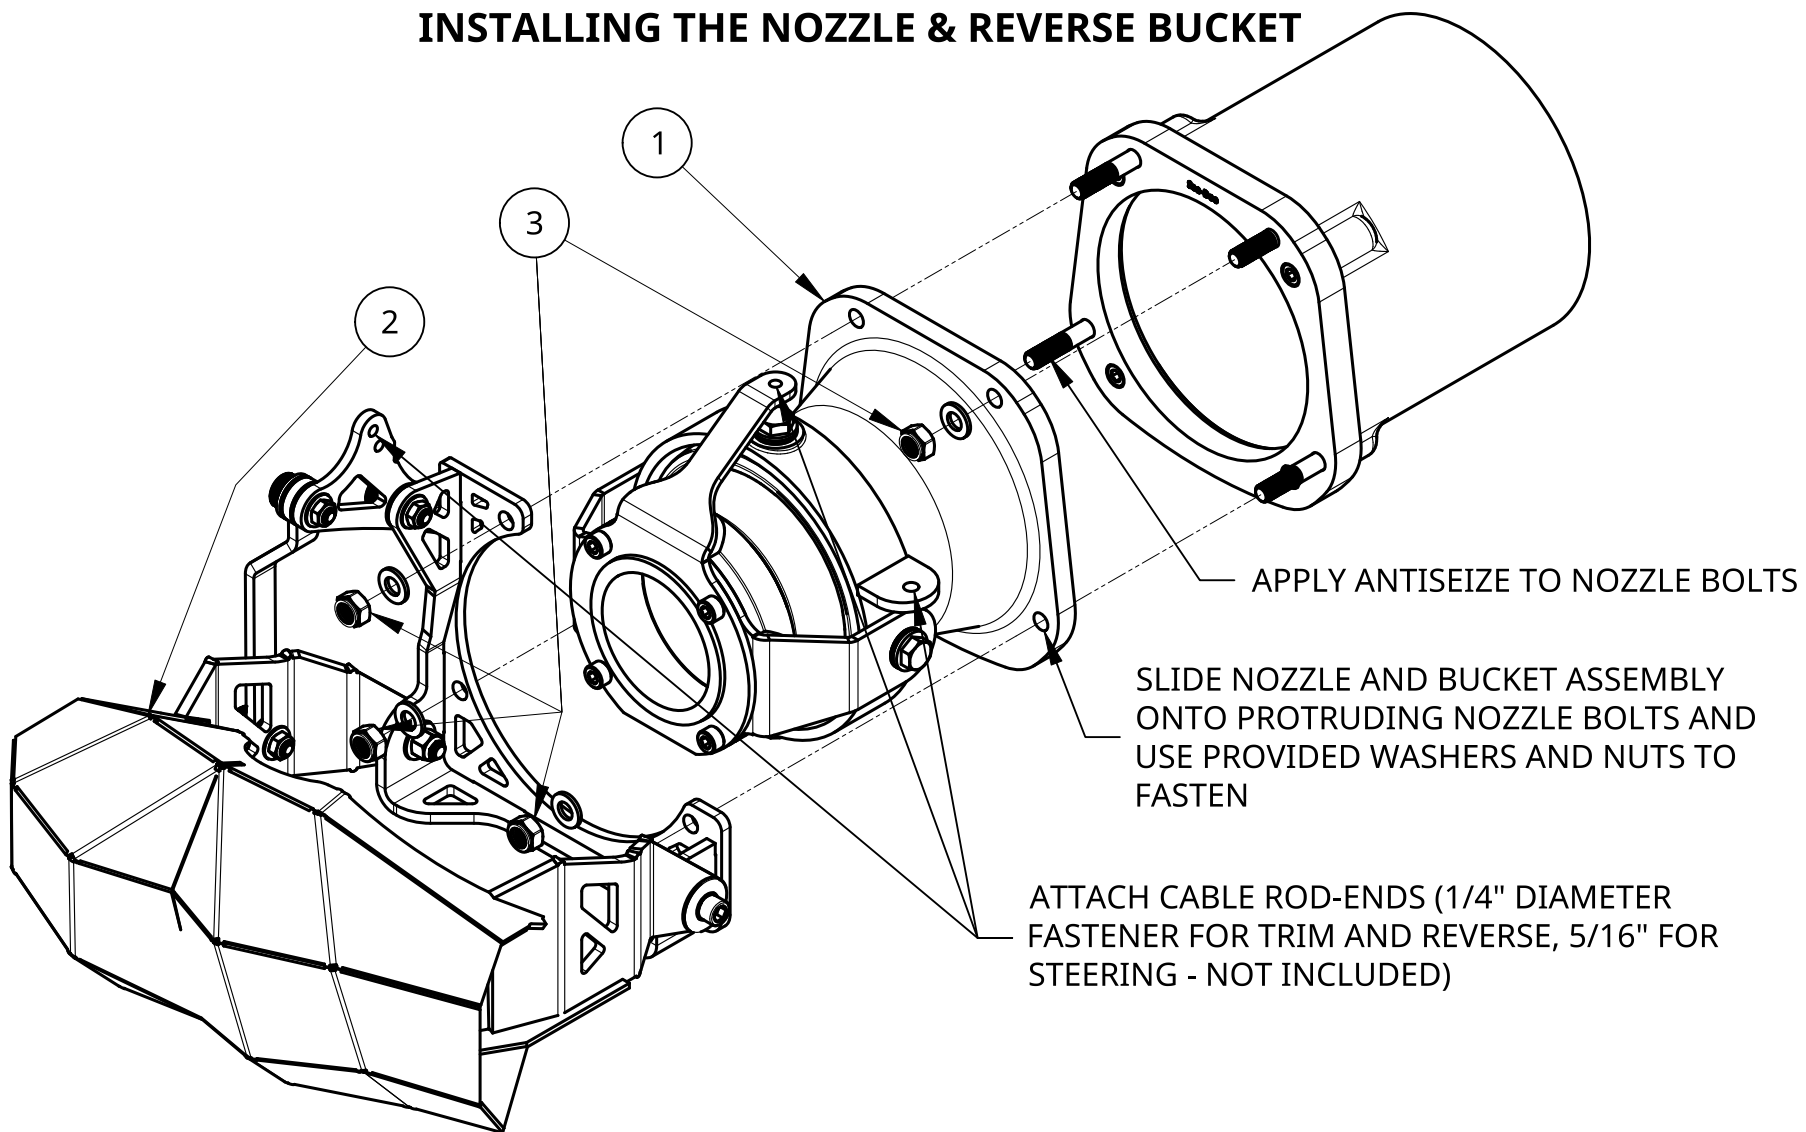

PARTS

1	Nozzle Assembly
2	Reverse Bucket Assembly
3	Provided Nozzle Nut and Washer

TITLE: MJ NOZZLE - INSTALLATION
INSTRUCTIONS - NOZZLE AND BUCKET




SIZE A CONTACT EMAIL: SALES@MINIJET.CA
PHONE NUMBER: +1 (613) 605-2628 REV A

SCALE: 1:4

SHEET 4 of 5

REPLACING THE NOZZLE INSERT

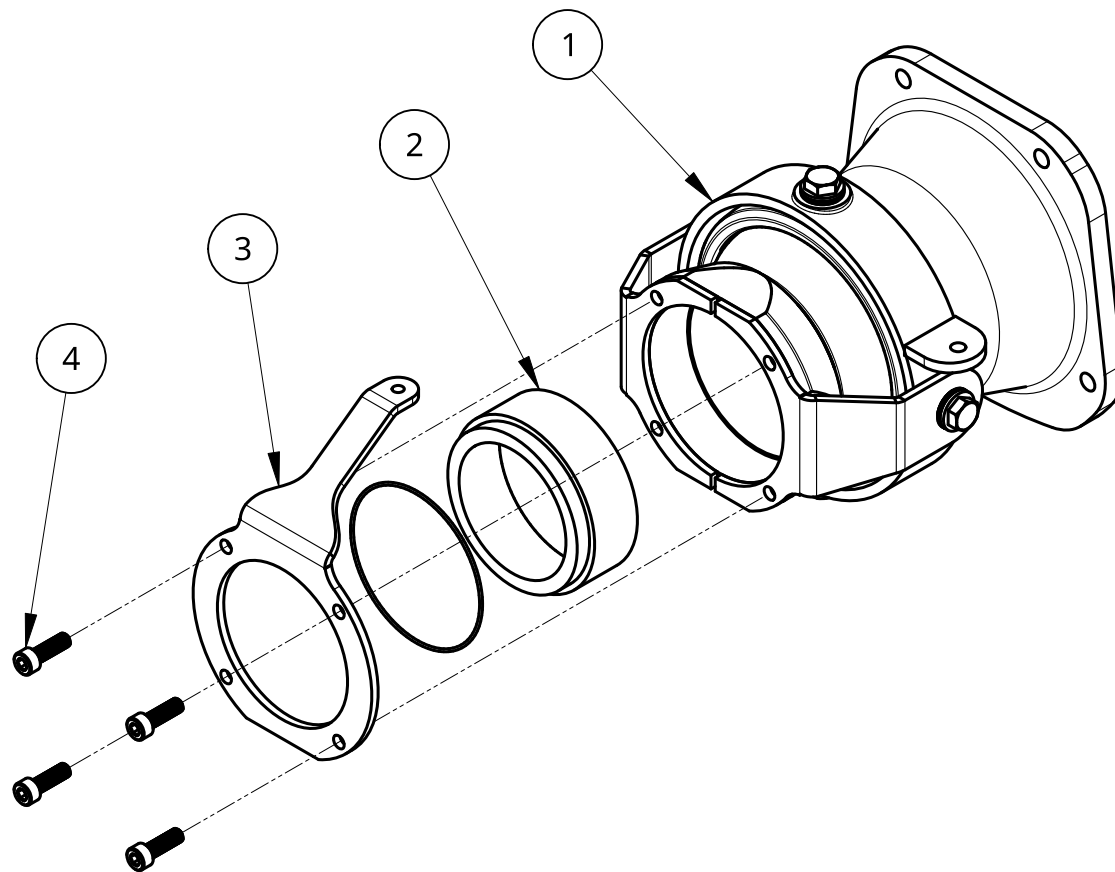

PARTS

1	Nozzle Body
2	Nozzle Insert
3	Trim Ring
4	M8 Fasteners

1. REMOVE 4 M8 FASTENERS
2. REMOVE TRIM RING
3. REMOVE AND REPLACED NOZZLE INSERT, TRANSFER O-RING
4. REINSTALL TRIM RING AND M8 FASTENERS - APPLY BLUE THREAD LOCKING COMPOUND

NOTE: TO REPLACE WHILE INSTALLED ON BOAT, SET TRIM FULLY DOWN TO ALLOW SUFFICIENT SPACE TO PERFORM OPERATION

TITLE: MJ NOZZLE - INSTALLATION
INSTRUCTIONS - NOZZLE AND BUCKET



SIZE A	CONTACT EMAIL: SALES@MINIJET.CA PHONE NUMBER: +1 (613) 605-2628	REV A
SCALE: 1:4		SHEET 5 of 5